



ROCKER BLADE INSTALLATION INSTRUCTIONS

Thank you for your purchase. After you open the package if you find any damage or missing parts please let me know immediately.

Contents Include:

Hardware


- 2 Side Rocker Blades (long pieces)
- 2 Rear Rocker Blades (short pieces)
- #10 self-tapping screws

Tools Needed:

- **SAFETY – Safety Glasses**
- Drill with Philips Bit
 - Right-Angled Drill Head (optional) but if used you can avoid lifting the car
- Jack / lift / ramps
- Jack stands (2)
- Rubbing alcohol & rag
- Scotch / 3M Double sided HD tape (optional)
- Friend to assist in holding the larger Rocker Blades (optional)

The blades are shipped unfinished with fasteners but I recommend using double sided Scotch/ 3M HD tape stick in addition for added safety. This isn't required but I like to over engineer things. Scotch/ 3M HD tape is available at Home Depot in the paint department on the top shelf. The picture on page 2 shows a complete Rocker Blade set with the tape applied for illustration.



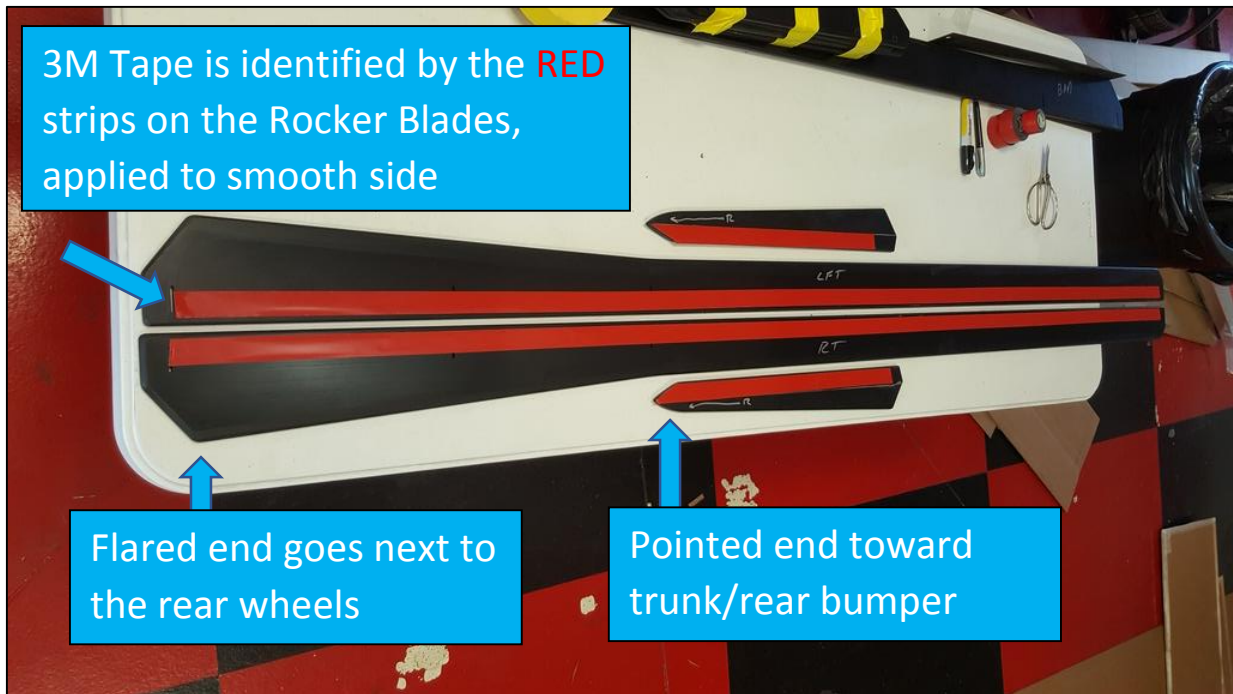

The material is ABS plastic commonly used for automotive body parts such as bumpers and can be finished in several different ways from a simple spraying with plastidip to wrapping or having them painted, but it does require finishing or the Rocker Blades may fade or crack over time without UV protection.

There is a right and left for the fronts and the rears. The **smooth side faces up after they're finished**. Please pre-fit them. The pointed end (rear Rocker Blades) will point to the bumper when installed. If you'll look under the bumper where the sides and rear intersect, the point of the blade will line up with this point (see picture below). If you have questions, please text me 865-250-3563.






You can install the Rocker Blades without jacking up the car if you have a right-angle screwdriver attachment. If not use a jack or a lift to give you some room.

1. Begin by parking your CTS V on a level surface, jacking up the car, and putting jack stands securely under it, as noted in the **BLACK** arrows below.

If you have a right-angled drill head this step can be skipped, but it will give you more access under the car when mounting the Rocker Blades

2. Thoroughly clean the underside of the rockers removing all trash, dirt or road tar.
3. Wipe down the underside of the rocker with rubbing alcohol to remove any wax (**BLUE** arrows).

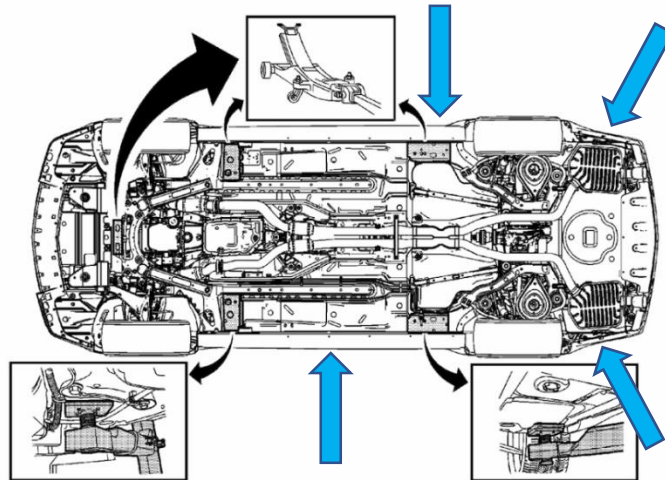

4. The blades are the same length as the car's rocker, so start at the narrow end (front/engine) and remove a foot or two of the double stick tape (red liner) and push the blade up into place.
 - a. It is suggested you have a second person help you install the larger Rocker Blades if possible.
 - b. If you have someone helping, you can remove all the tape liner and while your helper holds their end in place you work the blade in place moving towards them.
5. Work your way along each Rocker Blade until it is all in place, making sure you keep the amount of the exposed blade consistent. You can also vary the exposure by keeping it tight at the front and flared at the rear. Once all Rockers are in place, screw the supplied #10 self-tapping screws in the slotted holes.

Thank you again for your purchase from Black Moon Products. Please subscribe to the website's blog for announcements about sales events and new products I hope to be offering in the future. Please contact me if you have any questions.

Sal
Armand Salvatore
Sales@blackmoonproducts.com